


## INTRODUCTION

Thank you for your choice of the SKYRC e6, 100-240V AC balance charger. This unit is simple to use but its operation does require some knowledge on the part of the user. Please read this entire operating manual completely and attentively before using this product, as it covers a wide range of information on operating and safety.

SKYRC e6 Charger is an economic, high quality 100-240V AC balance charger, designed for charging LiPo and LiFe batteries from 2-6 cells in balance mode. The circuit power is 50W and max charge current can reach to 5A. There are four kinds of charge current 1A/2A/4A/5A that can be selected. You could select the proper charge current according to battery capacity.

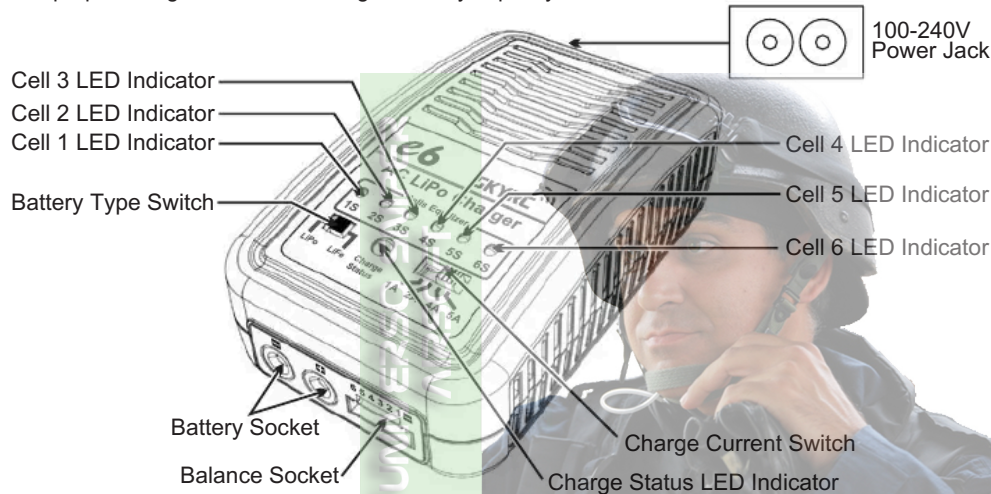

## CHARGE PROCEDURES

SKYRC e6 comes with the built in power supply. You can connect the AC power cord to the AC socket (100-240V AC) directly.

Note: This charger can charge LiPo and LiFe batteries ONLY in balance mode. In this case, you must use balance board to connect the charger with the battery.

Please refer to following steps to charge the battery,

- 1) Insert the AC power cord into the charger.
- 2) Insert the AC cord into a wall socket (100-240V). All LEDs will light for 1 second and the charge status LED will flash green which indicates the charger is ready to charge.
- 3) Select the battery type LiPo/LiFe by the toggle switch.
- 4) Select the proper charging current 1A/2A/4A/5A by the toggle switch.
- 5) Connect the battery to the charger main battery lead to battery socket and balance wires to balance socket.
- 6) The charger starts charging. The charge status LED and the cell status LED will glow constant red. If the battery pack is 2-cell, Cell 1 and Cell 2 LEDs will glow constant red; if the battery pack is 3-cell, Cell 1, Cell 2 and Cell 3 LEDs will glow constant red; and so on.


- 7) During the charging progress, when the charge status LED glows constant red, the charger is charging in CC mode; when the charge status LED glows constant orange, the charger is charging in CV mode;
- 8) When the cell LED is flashing, this cell is discharging for balancing.
- 9) When the battery is fully charged, the charge status LED will glow constant green.
- 10) Unplug the battery from the charger and the charge status LED will flash green which indicates the charger is ready to charge another battery.

### CAUTION:

This diagram shows the correct way to connect your battery to the e6 charger while charging in balance mode.

Failure to connect as shown in this diagram will damage this charger.

The main battery leads must be connected along with the balance lead connector as shown before charging your battery.

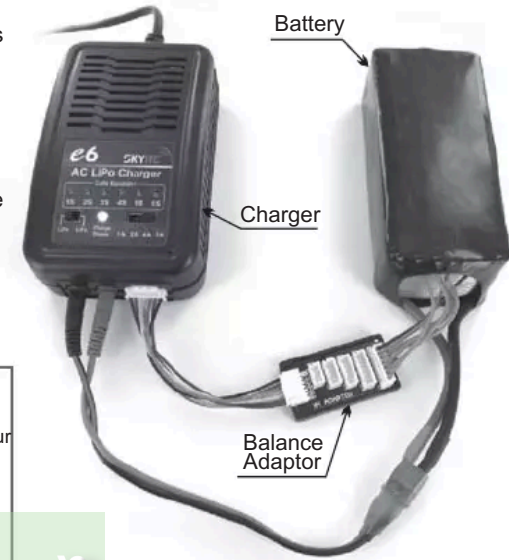

CONNECTION DIAGRAM

## EXPLANATION OF LED STATUS

Charge Status LED	LED flashes green	The charger is ready to charge.
	LED glows constant red	The charger is charging in CC mode.
	LED glows constant orange	The charger is charging in CV mode.
Cell Status LED	LED glows constant green.	The charging process finishes.
	LED glows constant red.	The cell is charging.
	LED flashes red	The cell is discharging.

### \* Error Message

If the charger encounters a problem, all LEDs will flash red in sequence to alert you to the errors. In this case, please disconnect the power cord from the wall socket and unplug the battery from the charger.

## SPECIFICATION

AC Input	100-240V
Battery Type	LiPo/LiFe
Cell Count	2-6 cells
Charge Current	1A/2A/4A/5A ± 10%
Circuit Power	50W
Current Drain for Balancing	200mA
Dimension	82.7x140.5x45.7mm
Weight	310g

UNIVERSO SIMPER  
AIRSOFT



UNIVERSO SIMPER  
AIRSOFT

UNIVERSO SIMPER  
AIRSOFT



UNIVERSO SIMPER  
AIRSOFT